

## Partslist FX Independence Pump

Location	Article number	Description
A1	19088	O-ring 15,88x2,62 NBR90
A2	19048	Adaptor M26,5x1,5 > M20x1 v8
A3	2509	Screw M5x6
A4	19076	Outer Tube
A5	2509	Screw M5x6
A6	19025	Screw M5x8 Coned
B1	19075	Backvalve Lid v8
B2	5204	Spring 0,5x3x15
B3	19002	Backvalve Red
B4	5111	O-ring 2,5 x 1,5 NBR90
B5	11624	O-ring 22 x 2,5 NBR70
B6	19049	Tube end 26,5x1,5 v8
B7	19082	O-ring 30x3 NBR 70
B8 (outer)	5105	O-ring 9,3 x 2,4 NBR90
B8 (inner)	4528	O-ring 7,66 x 1,78 NBR70
C1	16028	O-ring 12x1 NBR70
C2	2534	Grubscrew 5x6
C3	19070	Tube End / Pumparm Mount
C4	11502	Pivot Pin 2x20
C5	2500	Grub Screw M3x6
C6	19078	Pivot pin 6x24
D1	5104	O-ring 9,3 x 2,4 NBR70
D2	19092	O-ring 30,2 x 3 NBR 70
D3	19046	Big Piston
D4	19073	Supportring v8
D5	12046	O-ring 15,88 x 2,62 NBR70
E1	19071	Handle
E2	2508	Screw M3x10 Coned
E3	19091	Pumparm
E4	-	-
E5	19053	Linkage Screw Ext
E6	19054	Linkage Screw Int
E7	-	-
E8	19077	Linkage
F1	12046	O-ring 15,88 x 2,62 NBR70
F2	19073	Supportring v8
F3	19050	Linkage Mount
G1	19090	Tube 16mm
G2	5107	O-ring 2,9 x 1,78 PUR90
G3	19087	Small Piston
G4	19089	Rod 5mm
G5	19085	Tube 10mm
G6	19081	O-ring 11,1x1,6 NBR 70
G7	10974	Mid Piston
G8	1504	O-ring 4,42 x 2,62 NBR70